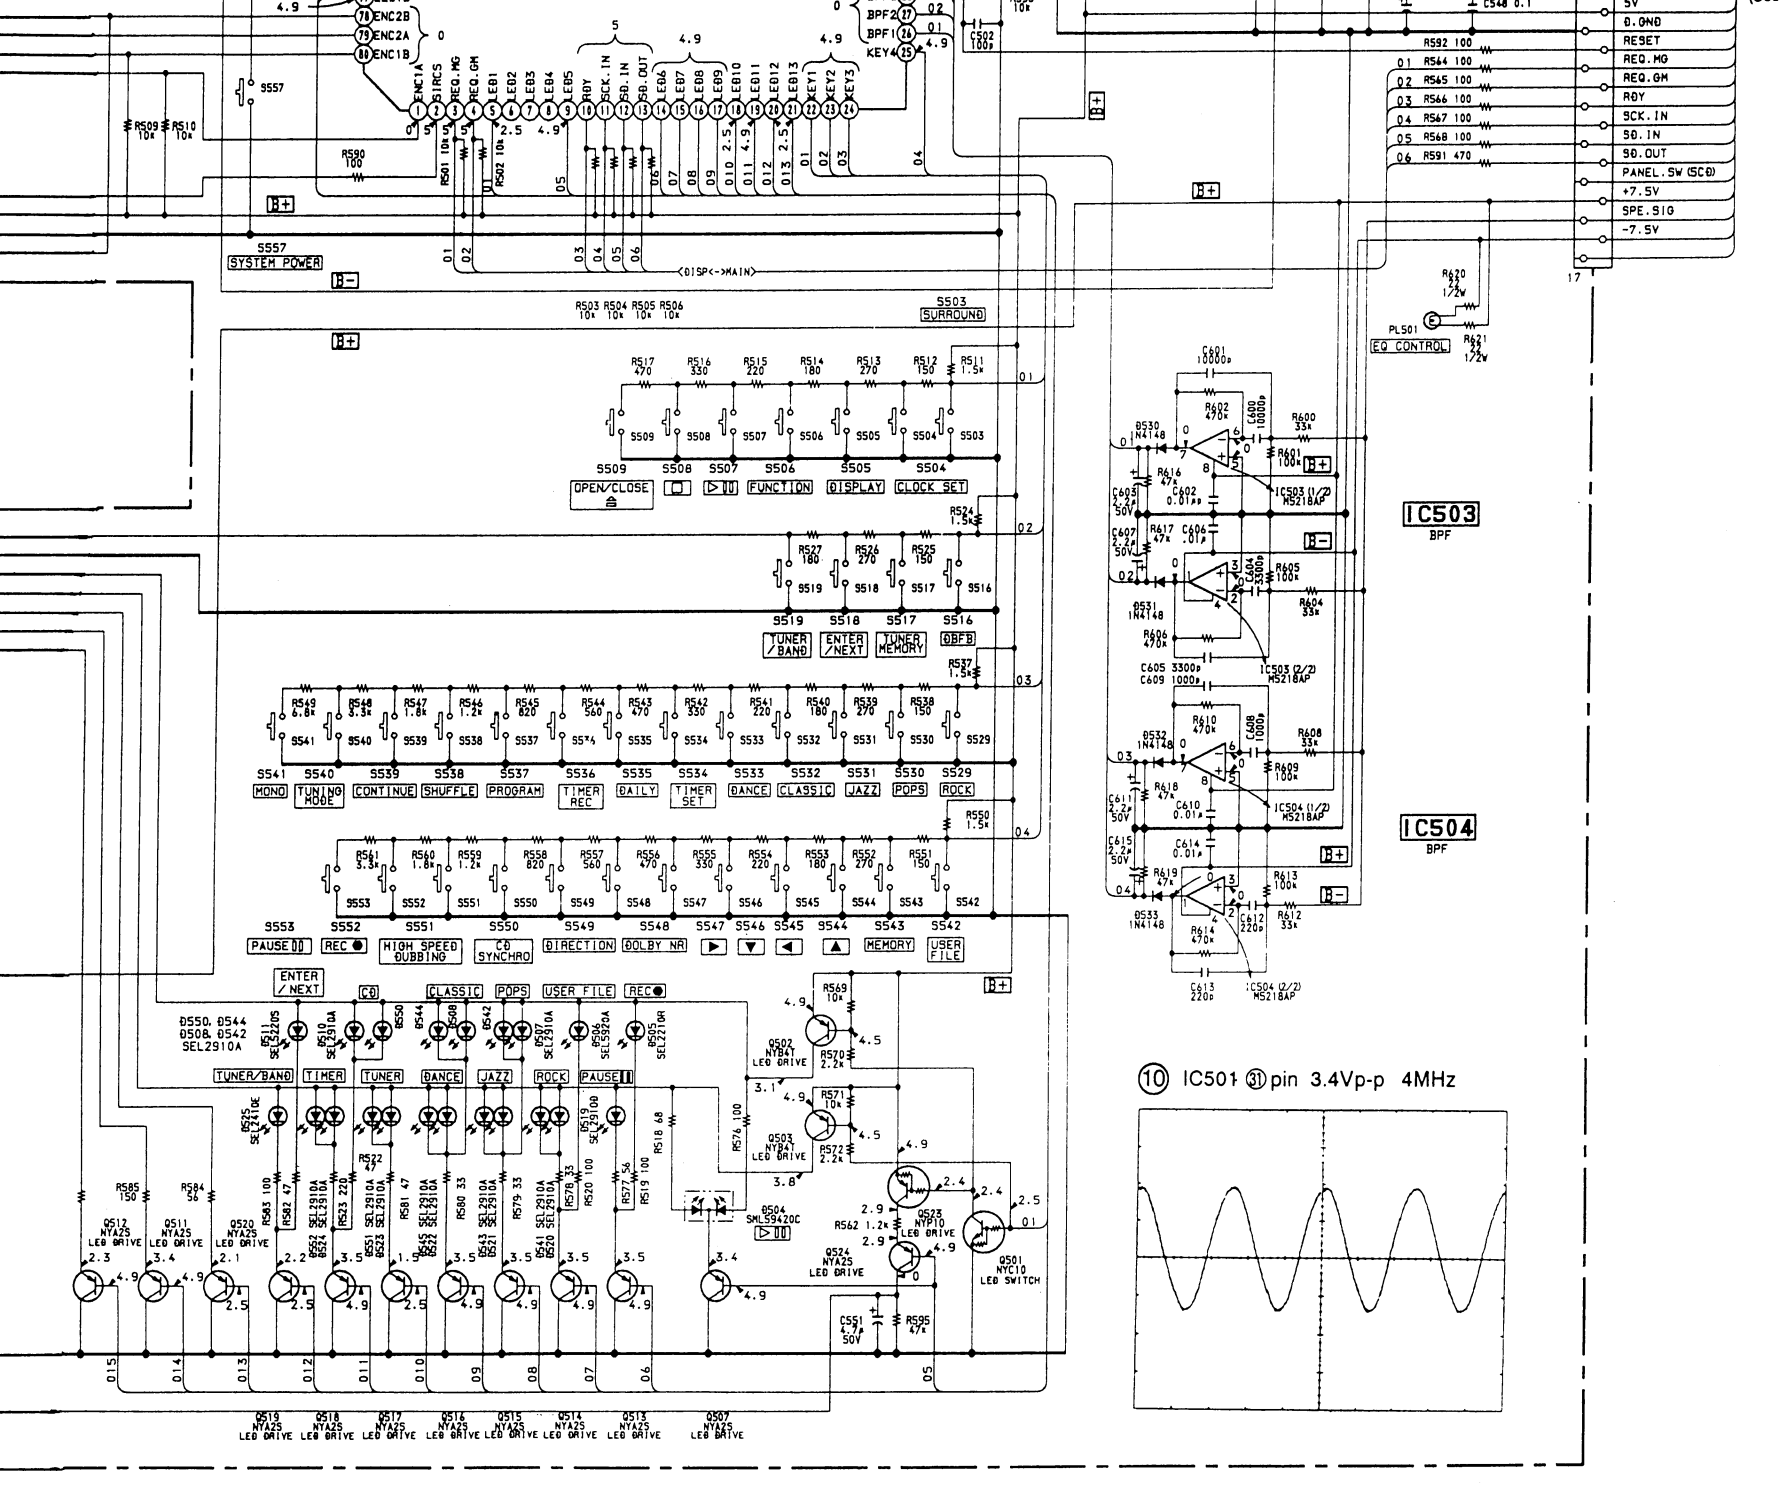
S557
SYSTEM POWER
S503
SURROUND
PL501
EQ CONTROL
IC503
BPF
IC504
BPF
S509 S508 S507 S506 S505 S504
OPEN/CLOSE
FUNCTION
DISPLAY
CLOCK SET
S519 S518 S517 S516
TUNER /BAND
ENTER /NEXT
TUNER MEMORY
S541 S540 S539 S538 S537 S536 S535 S534 S533 S532 S531 S530 S529
MONO
TUNING MODE
CONTINUE
SHUFFLE
PROGRAM
TIMER REC
DAILY
TIMER SET
DANCE
CLASSIC
JAZZ
POPS
ROCK
S553 S552 S551 S550 S549 S548 S547 S546 S545 S544 S543 S542
PAUSE
REC
HIGH SPEED DUBBING
CD SYNCHRO
DIRECTION
DOLBY NR
MEMORY
USER FILE
ENTER /NEXT
CD
CLASSIC
POPS
USER FILE
REC
TUNER/BAND
TIMER
TUNER
DANCE
JAZZ
ROCK
PAUSE
D550, D544
D508, D542
SEL2910A
Q502 NYB4T LED DRIVE
Q503 NYB4T LED DRIVE
Q504 SMLS9420C
Q523 NYP10 LED DRIVE
Q524 NYA2S LED DRIVE
Q501 NYC10 LED SWITCH
Q512 NYA2S LED DRIVE
Q511 NYA2S LED DRIVE
Q520 NYA2S LED DRIVE
Q519 NYA2S LED DRIVE
Q518 NYA2S LED DRIVE
Q517 NYA2S LED DRIVE
Q516 NYA2S LED DRIVE
Q515 NYA2S LED DRIVE
Q514 NYA2S LED DRIVE
Q513 NYA2S LED DRIVE
Q507 NYA2S LED DRIVE
⑩ IC501 ㉛ pin 3.4Vp-p 4MHz
B+
B-
<DISP<->MAIN>
0.GND
RESET
REQ.MG
REQ.GM
ROY
SCK.IN
SO.IN
SO.OUT
PANEL.SW (SCO)
+7.5V
SPE.SIG
-7.5V